


# 1/2" Wear Layer Only For Splash Pads or Pathways

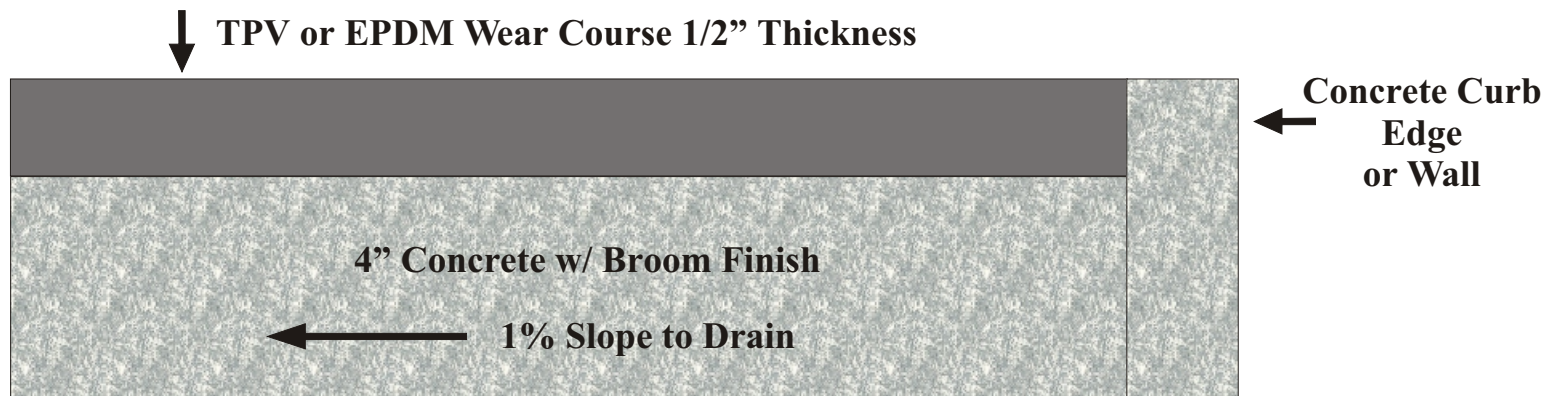

- \* This drawing is not to scale.
- \* Rubber surfacing corresponds to slope of subgrade.
- \* Must allow sufficient cure time for Sub-Base.